


# DENTAL AMALGAM DISPOSAL

**ONCE A WEEK:** Inspect your amalgam separator and keep a log. Replace/Repair defects within 10 days of discovery.

**DON'T USE BLEACH** or chlorine containing cleaners to flush wastewater lines. Cleaners cannot have a pH lower than 6 or more than 8.

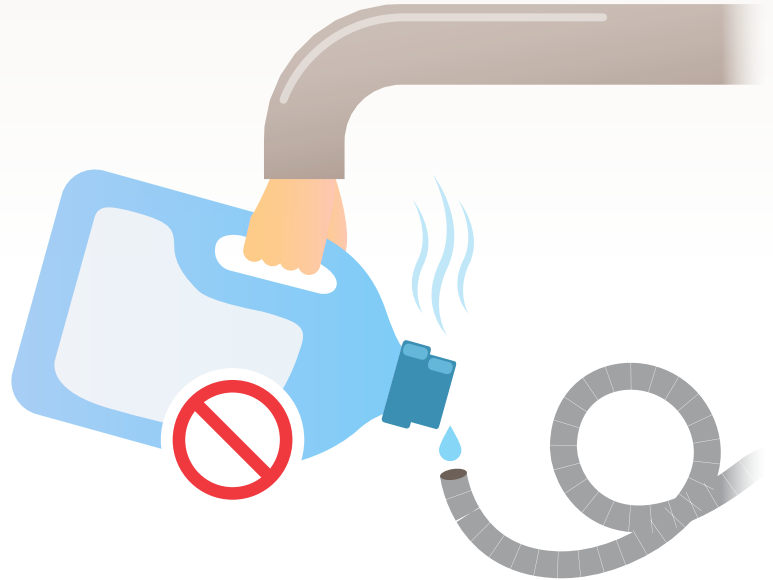

## Keep amalgam out of sinks, toilets and trash.

Recycle chair-side traps, vacuum pump filters and amalgam separator waste.



Use precapsulated alloy not bulk.



Use ADA & ANSI compliant recycler.



Central Valley Water  
Reclamation Facility  
801.973.9100